


REMOVAL AND INSTALLATION

REMOVAL

1. Using a small flat-bladed tool, carefully open the two fastener covers (1) located in the a-pillar trim panel.
2. Remove the two bolts (2) that secure the a-pillar trim panel to the a-pillar and remove the trim panel.

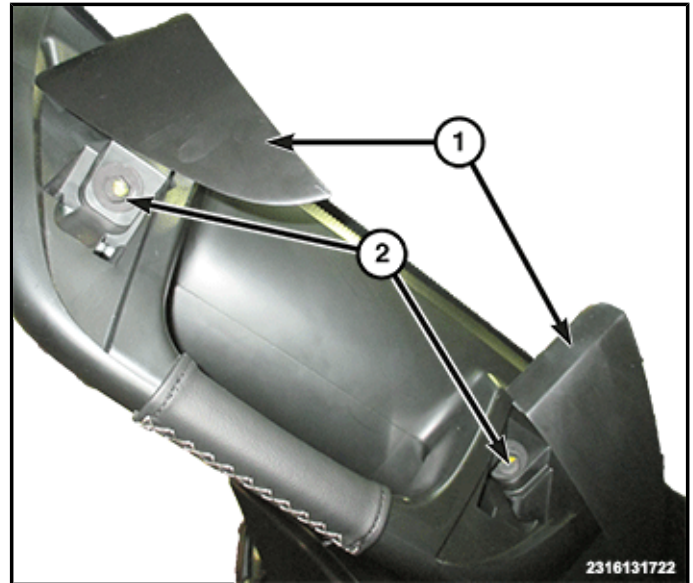

INSTALLATION

1. Install the A-pillar trim panel to the A-pillar and install the two bolts (2). Tighten the bolts to the proper (Torque Specifications).
2. Close the two fastener covers (1) located in the A-pillar trim panel.

