

INSTRUCTIONS:

Print the "EF Johnson 5100 Programming Quick Cards", there are 2 cards per page. Cut each card out and fold in half, for a double sided card.

FOLD HERE

FOLD HERE

EFJ 5100 PROGRAMMING

ADD A CHANNEL TO SCAN

Press **F2**
Use Rocker Switch to highlight **SCAN EDIT**
Press **F2**
Use Rocker Switch to highlight **LIST**
Press **F2**
Use Rocker Switch to select channel
Press **F2** to add channel to scan list(s),
make priority P, or priority 2 P2

REMOVE A CHANNEL FROM SCAN

Follow Add Channel directions
Press **F2** till nothing shows by channel

DISABLE KEYPAD

Press and hold **F3**
To enable: repeat process

CHANGE ZONES

Select with Rocker Switch

ADD PRIORITY SCAN CHANNEL

See ADD A CHANNEL TO SCAN

CHANGE FREQUENCY

Select the Zone and Channel to program
Go to **PROGRAM ACCESS**
Display shows **RX Freq**
Press **F2**
Type in RX frequency with keypad
Press **F2**
Use the Rocker Switch to select **TX Freq**
Type in TX frequency with keypad
Press **F2**
Press **F1**
Use Rocker Switch to select **CHNG CHAN**
Press **F2**
Use Rocker Switch to select next channel
Press **F2**
Use Rocker Switch to select **CHAN PARMS**
Press **F2**
Follow directions above

PROGRAM ACCESS

Press **F4**
Select **CHAN PARMS** with Rocker Switch
Press **F2**
Enter **PASSWORD** (If needed)
Press **F2**

EFJ 5100 PROGRAMMING

ADD A CHANNEL TO SCAN

Press **F2**
Use Rocker Switch to highlight **SCAN EDIT**
Press **F2**
Use Rocker Switch to highlight **LIST**
Press **F2**
Use Rocker Switch to select channel
Press **F2** to add channel to scan list(s),
make priority P, or priority 2 P2

REMOVE A CHANNEL FROM SCAN

Follow Add Channel directions
Press **F2** till nothing shows by channel

DISABLE KEYPAD

Press and hold **F3**
To enable: repeat process

CHANGE ZONES

Select with Rocker Switch

ADD PRIORITY SCAN CHANNEL

See ADD A CHANNEL TO SCAN

CHANGE FREQUENCY

Select the Zone and Channel to program
Go to **PROGRAM ACCESS**
Display shows **RX Freq**
Press **F2**
Type in RX frequency with keypad
Press **F2**
Use the Rocker Switch to select **TX Freq**
Type in TX frequency with keypad
Press **F2**
Press **F1**
Use Rocker Switch to select **CHNG CHAN**
Press **F2**
Use Rocker Switch to select next channel
Press **F2**
Use Rocker Switch to select **CHAN PARMS**
Press **F2**
Follow directions above

PROGRAM ACCESS

Press **F4**
Select **CHAN PARMS** with Rocker Switch
Press **F2**
Enter **PASSWORD** (If needed)
Press **F2**