AU-SA Quick Installation Guide

This Quick Installation Guide is intended for experienced installers. For more information refer to the relevant sections in the System Manual.

AU-E-SA Package Content

Check that the package contains:

- IDU Indoor Unit with a wall mounting kit
- Mains power cord
- Outdoor Unit
- Pole mounting kit for the Outdoor Unit
- Two sets of stickers (attached to the ODU). Each set includes two stickers, one with the ODU's MAC address and one with the S/N details.
- This Quick Installation Guide

Additional Equipment and Tools required for Installation

- Indoor-to-outdoor Ethernet Category 5E in the required length and two shielded RJ-45 connectors.
- Antenna and RF cable.
- Ethernet cable (straight for connecting to a hub/switch etc., crossed for connecting directly to a PC's NIC).
- Crimping tool for RJ-45 connectors.
- Grounding cable with an appropriate termination.
- Mains plug adapter or termination plug (if the power plug on the supplied AC power cord does not fit local power outlets).
- Portable PC with Ethernet card and Telnet or Configuration Utility SW, and a crossed Ethernet cable.
- Installation tools and materials, including appropriate means (e.g. a pole) for installing the outdoor equipment.

WARNING:	ONLY experienced installation professionals who are familiar with local building and safety codes and, wherever applicable, are licensed by the appropriate government regulatory authorities should install outdoor units and antennas. Failure to do so may void the equipment warranty and may expose the end user or Service Provider to legal and financial liabilities. The manufacturer and its resellers or distributors are not liable for injury, damage or regulation violations associated with the installation of Outdoor Units or antennas.

ATTENZIONE: SOLO professionisti esperti che hanno familiarità con le norme di costruzione locali e coi codici di sicurezza e, ove applicabile, sono autorizzati dalle autorità governative competenti possono installare unità esterne ed antenne. Assicurarsi che le unità esterne, antenne e strutture di supporto siano installate correttamente per eliminare ogni pericolo fisico a persone o cose. In caso contrario, ciò può invalidare la garanzia del prodotto e può esporre l'utente finale o il fornitore di servizi a responsabilità legali ed economiche. Anche quando la messa a terra non è obbligatoria in base alla normativa regolatoria applicabile e ai codici nazionali, è obbligatorio garantire che l'unità esterna e il palo dell'antenna siano messi a terra e idonei dispositivi di protezione contro i fulmini siano utilizzati in modo da fornire protezione contro le sovratensioni e le scariche statiche. In ogni caso, il Fornitore e i suoi rivenditori non sono responsabili per eventuali danni fisici, danni ad oggetti o violazioni del regolamento associati con o causati dall' installazione, la messa a terra o di protezione contro i fulmini.

Installation Guidelines


1. Select the optimal locations for the equipment using the following guidelines:
   a. The antenna should be installed so as to provide coverage to all Subscriber Units within its service area. The higher the placement of the antenna, the better the achievable link quality. The location of the outdoor unit should enable easy access to the unit for installation and testing.
   b. The ODU should be installed as close as possible to the antenna (to ensure that the antenna's characteristics are not affected the distance must be higher than 10 cm).
   c. The indoor equipment should be installed as close as possible to the location where the indoor-to-outdoor cable enters the building. The location of the indoor equipment should take into account its connection to a power outlet and the network data equipment.
2. Mount the outdoor unit using either the special brackets and open-ended bolts supplied with the unit, or metal bands (9/16" wide, at least 12" long).

NOTE: Be sure to insert the open ended bolts with the grooves pointing outward, since these grooves enable you to use a screwdriver to fasten the bolts to the unit.

3. Use appropriate sealing material to protect the ODU connections against moisture and humidity. Use removable sealing material, such as a tar seal, to enable future access to the connector. Use

high quality sealing material such as Scotch® 130C Linerless Rubber Splicing Tape from 3M to ensure protection against dust and water. Loop & tie the cables near the unit for strain relief and for routing water away from the unit: use additional cable strips to route the cable such that water can accumulate on the cable bends, away from the unit.

4. Connect a grounding cable between the Ground terminal of the ODU (marked ⏚) and a good ground connection. Connect the RF connector located on the top panel of the ODU (marked ▽) to the antenna. The RF connectors should be properly sealed to protect against rain and moisture.
5. Remove the two screws holding the waterproof seal to the ODU and remove the waterproof seal. Unscrew the top nut from the waterproof seal.
6. Route a straight Category 5E Ethernet cable (8-wire, 24 AWG) through both the top nut and the waterproof seal. Insert and crimp the RJ-45 connector. Connect the Ethernet cable to the ODU's RJ-45 connector. Before inserting the cable into the connector, take back the shield drain wire to ensure a good connection with the connector's shield after crimping.
7. Replace the waterproof seal and tighten the top nut. Make sure that the external jack of the cable is well inside the waterproof seal to guarantee a good seal.
8. Route the cable to the location selected for the indoor unit. Assemble an RJ-45 connector with a protective cover on the indoor end of the cable. Before inserting the cable into the connector, take back the shield drain wire to ensure a good connection with the connector's shield after crimping.
9. Attach the ODU's MAC address and S/N stickers to the bottom of the IDU for future reference. (save the spare set of stickers for future use).

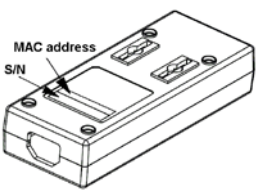

10. Mount the indoor unit and connect the outdoor-to-indoor cable to its RADIO port. Connect the indoor unit to the AC mains using the power cord supplied with the unit. Use a straight Ethernet cable to connect the ETHERNET port to a Hub/Switch. Use a crossed Ethernet cable to connect directly to a PC's NIC.

NOTE: The indoor unit should be connected to the power source only after it has been connected to the outdoor unit.

The color codes of the power cord are:

Brown	*Phase*	*~*
Blue	*Neutral*	*0*
Yellow/green	*Grounding*	⏚

Basic Configuration

1. Initial configuration can be performed either via Telnet or using the configuration utility.
2. Connect a PC to the Ethernet port, using a crossed cable. The default IP address is 10.0.0.1.
3. If you use Telnet for initial configuration, run the Telnet program. Select your permitted access level and enter your password (the default Installer password is “user”). Access the *Basic Configuration* menu and configure the basic parameters required to allow connectivity with the Subscriber Units and to support remote management of the unit. In many installations, most of these parameters should not be changed from their default values. The following list includes the basic parameters and their default values:

Table 1: Basic Configuration

Parameter	Default	Comment
Ethernet Port Negotiation Mode	Auto Negotiation	
IP Address	10.0.0.1	
Subnet Mask	255.0.0.0	
Default Gateway Address	0.0.0.0	
DHCP Option	Disable	
Access to DHCP	From Ethernet Only	
ESSID	ESSID1	
Hidden ESSID Option	Disable	
Operator ESSID Option	Enable	
Operator ESSID	ESSID1	
Country Code Select	Depends on factory configuration	Applicable only for 5.4 and 5.8 GHz units. Country Code must comply with local regulations.
Sub-Band Select	1	
Frequency	The lowest frequency in the selected Sub-Band	
DFS Required By Regulation (AU, if DFS is supported by Country Code)	Depends on Country Code	

Parameter	Default	Comment
Frequency Subset Definition	All frequencies	Applicable only if DFS is enabled
DFS Detection Algorithm (AU using Universal Country Code in 5.4 or 5.8 GHz band)	ETSI	Applicable only if DFS is enabled
Transmit Power	Depends on HW Revision and Sub Band	
Tx Control	On	
ATPC Option	Enable	
Antenna Gain	Not Set Yet	Must be configured according to actual value, taking into account cable's attenuation (otherwise the unit will not transmit).
Cell Distance Mode	Automatic	
Maximum Cell Distance	0 (no compensation)	Applicable only for Manual Cell Distance Mode
Per SU Distance Learning	Disable	
VLAN ID-Management	65535	
Authentication Algorithm	Open System	Availability of security parameters depends on support according to the country code.
Data Encryption Option	Disable	
Security Mode	WEP	
Default Multicast Key	Key 1	
Key 1 to Key 4	00…0 (32 zeros = no key)	

4. Reset the unit to apply the changes.

Verifying Proper Operation

1. Once you have connected the unit to an Ethernet outlet, verify that the green Ethernet connectivity indicator is on, blinking whenever the unit receives or transmits traffic on the Ethernet port.
2. Verify wireless data connectivity by pinging a Subscriber Unit or by connecting to the Internet.

3. To verify proper operation of the outdoor and indoor units, view the LED indicators:

Table 2: Outdoor Unit LEDs

Name		Description	Functionality
W-LINK		Wireless Link traffic Indication	Green: Unit is associated with one or more SUs. Blinking Red: No association. Off: Wireless link disabled
Status		Self-test and power indication	Green: Power is available and self-test passed. Blinking Amber: Testing (not ready for operation) Red: Self-test failed. Fatal error
ETH		Ethernet activity/ connectivity indication	Green: Ethernet link between the indoor and outdoor units is detected, no activity Blinking Green: Ethernet connectivity is OK, with traffic on the port. Blinking rate proportional to traffic rate. Red: No Ethernet connectivity between the indoor and outdoor units.

Table 3: PS1073 Indoor Unit LEDs

Name	Description	Functionality
POWER	Power Indication	Green – IDU power is OK. Off - No power or power failure.
ETH	Self test and end-to-end Ethernet connectivity indication	Off – No Ethernet connectivity has been detected between the outdoor unit and the device connected to the indoor unit. Green– Self-test passed and Ethernet connection confirmed by the outdoor unit (Ethernet integrity check passed). Blinking whenever there traffic on the Ethernet port.

Electronic Emission Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

a. This device may not cause harmful interference.
b. This device must accept any interference received, including interference that may cause undesired operation.

FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC rules and to EN 301 489-1 rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in commercial, business and industrial environments. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.

FCC Radiation Hazard Warning

To comply with FCC RF exposure requirement, the antenna used for this transmitter must be fixed-mounted on outdoor permanent structures with a separation distance of at least 2 meter from al persons.

R&TTE Compliance Statement

This equipment complies with the appropriate essential requirements of Article 3 of the R&TTE Directive 1999/5/EC.